


STERLING KIT C-4 WACO SRE 33" SPAN

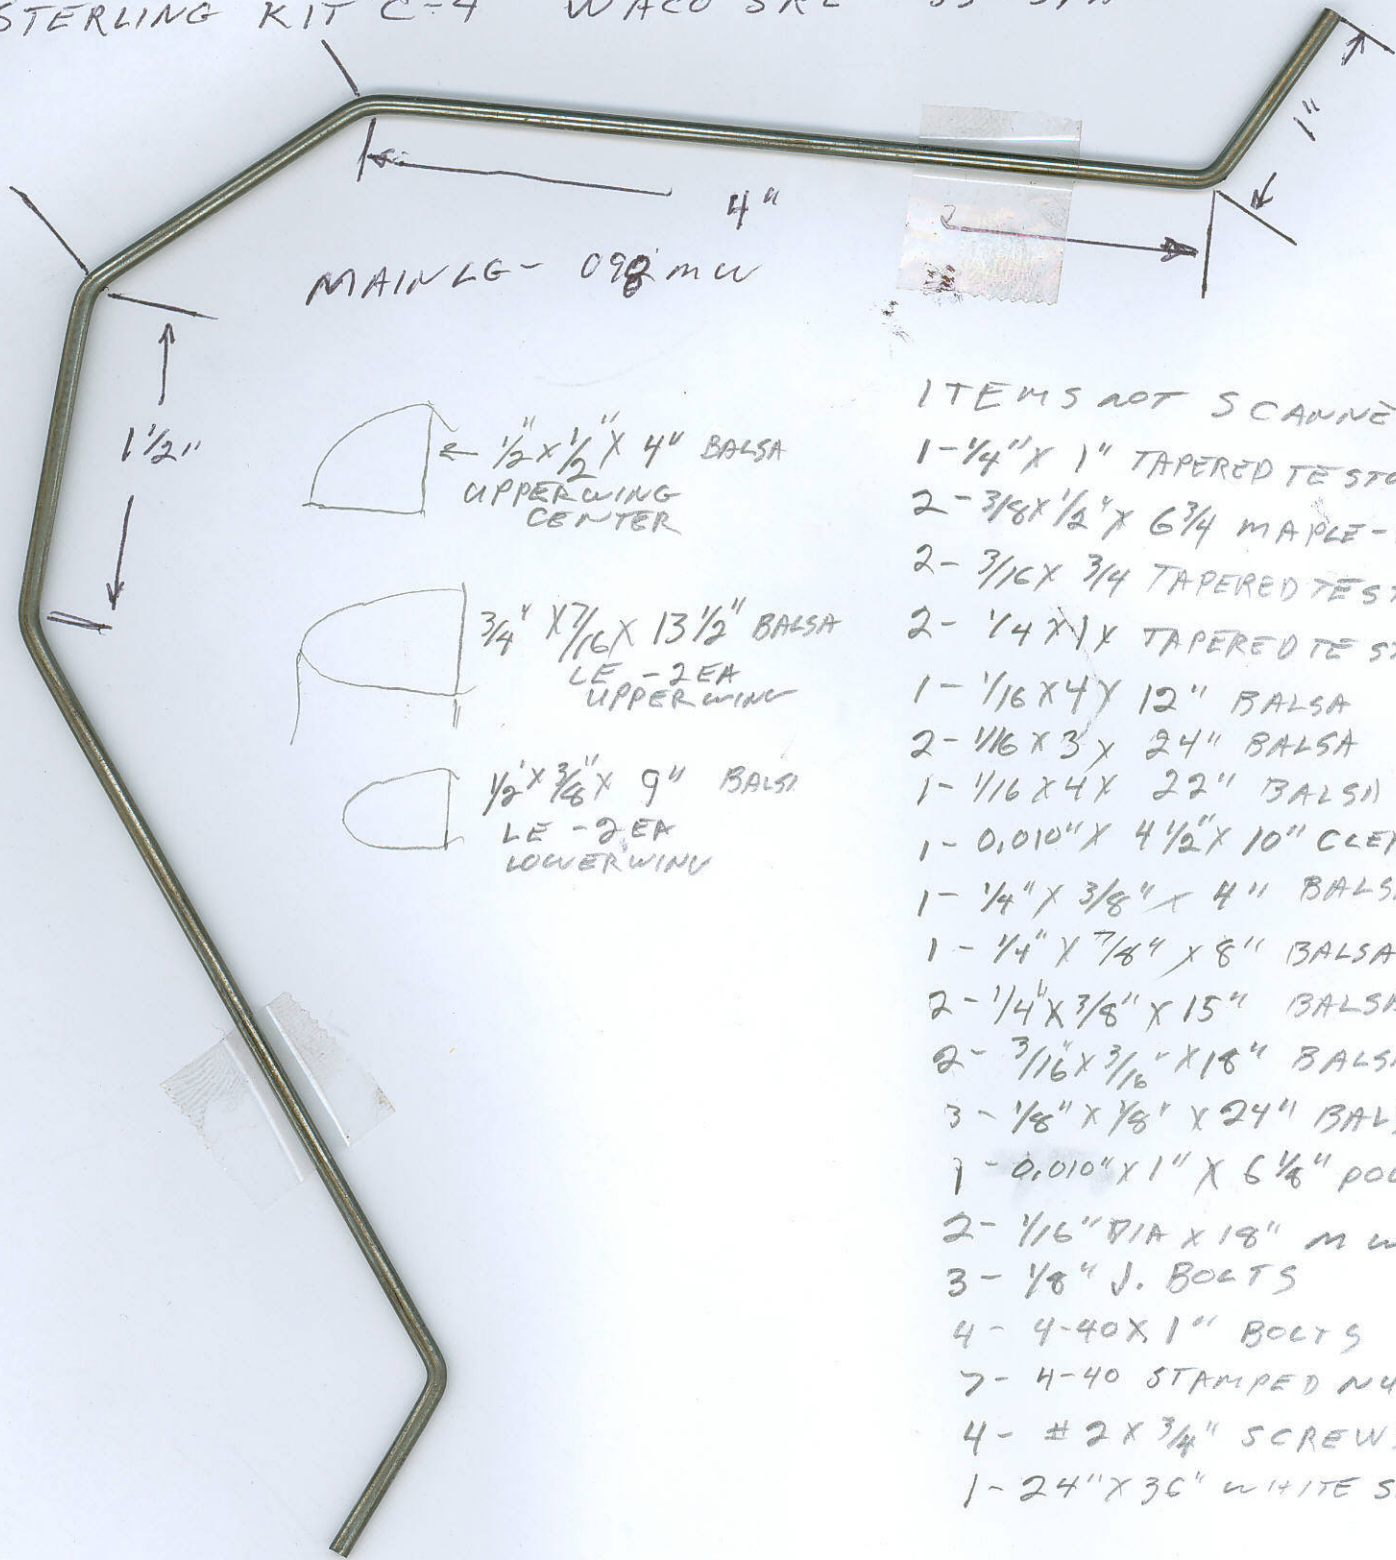

MAIN LG - 098 MW

$\frac{1}{2}$ " x $\frac{1}{2}$ " x 4" Balsa
UPPER WING
CENTER

$\frac{3}{4}$ " x $\frac{7}{16}$ " x 13 $\frac{1}{2}$ " Balsa
LE - 2 EA
UPPER WING

$\frac{1}{2}$ " x $\frac{3}{8}$ " x 9" Balsa
LE - 2 EA
LOWER WING

ITEMS NOT SCANNED

- 1 - $\frac{1}{4}$ " x 1" TAPERED TESTOCK, Balsa 4" LONG
- 2 - $\frac{3}{8}$ " x $\frac{1}{2}$ " x 6 $\frac{3}{4}$ " MAPLE - MW
- 2 - $\frac{3}{16}$ " x $\frac{3}{4}$ " TAPERED TESTOCK 9" LONG
- 2 - $\frac{1}{4}$ " x 1" TAPERED TESTOCK 13 $\frac{1}{2}$ " LONG
- 1 - $\frac{1}{16}$ " x 4" x 12" Balsa
- 2 - $\frac{1}{16}$ " x 3" x 24" Balsa
- 1 - $\frac{1}{16}$ " x 4" x 22" Balsa
- 1 - 0.010" x 4 $\frac{1}{2}$ " x 10" CLEAR PLASTIC
- 1 - $\frac{1}{4}$ " x $\frac{3}{8}$ " x 4" Balsa
- 1 - $\frac{1}{4}$ " x $\frac{7}{8}$ " x 8" Balsa
- 2 - $\frac{1}{4}$ " x $\frac{3}{8}$ " x 15" Balsa
- 2 - $\frac{3}{16}$ " x $\frac{3}{16}$ " x 18" Balsa
- 3 - $\frac{1}{8}$ " x $\frac{1}{8}$ " x 24" Balsa
- 1 - 0.010" x 1" x 6 $\frac{1}{8}$ " POLY HINGE
- 2 - $\frac{1}{16}$ " DIA x 18" MW
- 3 - $\frac{1}{8}$ " J. BOLTS
- 4 - 4-40 x 1" BOLTS
- 7 - 4-40 STAMPED NUTS
- 4 - #2 x $\frac{3}{4}$ " SCREWS
- 1 - 24" x 30" WHITE SILK SPAN